

DJI Pocket 2 connected to the Mimo App

When using the DJI Pocket 2 connected to the Mimo App on a smartphone, you gain access to a larger screen and a comprehensive set of controls and settings. The Mimo App's main screen offers a variety of functionalities as shown below.

Source video: <https://www.youtube.com/watch?v=tE3Cc-3XgSs>

Core Controls and Navigation:

Mode Selection You can select the desired mode from the right side of the main screen, including video, photo, slow motion, timelapse, and hyperlapse.

Camera Orientation A button allows you to flip the camera around and back to its original position.

Gimbal Re-centering Another button is available to re-center the gimbal.

Record Button This button initiates recording or takes a picture, depending on the selected mode.

Gimbal Speed You can select the gimbal speed, with choices such as "slow follow" or "fast follow".

Gimbal Mode The gimbal mode can be selected from "follow mode," "tilt locked," or "FPV".

Accessing Recordings You can view recordings stored on the memory card, with options to play, delete, and download them from the SD card to your smartphone.

Virtual Joystick A circular virtual joystick allows for movement of the camera up, down, left, right, and diagonally.

Image and Video Manipulation:

Focus Control You can choose where to focus by tapping the screen. Tapping, releasing, and then pressing and holding will lock both focus and exposure.

ActiveTrack Drawing a box over a subject on the screen enables ActiveTrack, allowing the camera to follow the selected subject.

Zoom Using two fingers on the screen, you can zoom in and zoom out.

Resolution and Frame Rates Options for resolution and frame rates are available on the left side of the screen.

Glamour Effects These "beauty effects" can be turned on, off, or set to a custom mode to make the face appear slimmer, softer, brighter, or adjust eye size.

Advanced Settings (via Three Dots Menu):

PRO Mode Accessing this mode opens up more advanced options.

Focus Mode Choices include "autofocus continuous" or "autofocus single".

White Balance Can be set to "auto" or "custom," with a temperature bar for custom adjustments.

Color Profile Selection of different color profiles is available.

Sound Options Various sound options can be chosen.

Overexposure Alert An alert for overexposure can be enabled.

Histogram The histogram can be displayed.

Manual Settings PRO mode allows for manual adjustments of ISO and shutter speed.

Calibrate Gimbal The gimbal can be calibrated through this menu.

Gimbal Easy Control This option can be turned on or off. When off, it displays two independent joystick controls: the right side for tilt and the left side for panning.

Format SD Card You can choose to format the SD card from this menu.

Specific Mode Controls:

Hyperlapse

Select resolution on the left side.

Select the speed of the hyperlapse, where a larger number results in faster jumps in the video.

Timelapse

The default resolution is 1080 and 30 frames per second, which cannot be changed unless PRO mode is used.

In PRO mode for Timelapse, you can select different frame rates (24, 25, or 30), though the resolution remains 1080.

From a separate menu, you can select:

Duration: How long the gimbal performs the timelapse.

Interval: The time between each shot (e.g., 1, 4, or 15 seconds).

Timelapse Mode: Adds motion to the timelapse. Options include "Fixed angle" (no motion), "Left to right" (gimbal pans slowly), "Right to left," and "Custom motion" where you can add specific points (A, B, C, D) for the gimbal to move between.

Slow Motion

Primarily allows you to start recording; settings are fixed at 1080p and 4x slow motion.

Regular Video Mode

Resolution can be chosen from 1080p, 2.7K, and 4K.

Video frame rate can be selected from 24, 25, 30, 48, 50, and 60 frames per second.

Video quality options include "battery saver" or "high quality".
Regular Photo Mode

You can select between 16 or 64 megapixels.

Panorama Shot

Options for 3x3 or 180-degree panorama shots are available.

A timer can be set for 3, 5, or 7 seconds, or turned off.

Story Mode

Accessed from the right-side menu or by pressing the 'S' button.

Allows selection of different templates, each with unique transitions and music.

Offers "custom story" to customize existing templates with more choices.

You can also create new templates from scratch in "my templates".